

Art.Nr. 2152208

TRAUMSCHWINGER®

*Your
manual*

**BABYSCHWINGER &
KINDERSCHWINGER**

Inhalt

1	Introduction	4
2	BABYSCHWINGER/ KINDERSCHWINGER.....	6
	2.1 BABYSCHWINGER.....	6
	2.2 KINDERSCHWINGER.....	8
3	Prerequisites.....	9
4	Individual Parts.....	10
5	Assembling the height adjustment	12
	5.1 Prepare the threaded rods	12
	5.2 Insertion of threaded rods (1)	12
	5.2 Inserting the threaded rods (2)	13
	5.3 Attach the first stainless steel inlays	13
	5.4 Attach the stainless steel bushings.....	14
	5.5 Inserting the steel pin into the wooden wedge	14
	5.6 Placing the wood wedge over the stainless steel inlay.....	15
	5.7 Attaching the second noble steel inlay	15
	5.8 Attaching the second wooden panel.....	16
	5.9 Screw on and tighten the round nuts.....	16
	5.10 Insertion of the carabineer	17
	5.11 Finished height adjustment	17
6	Netting connect with the height adjustment.....	18
	6.1 Lay netting	18
	6.2 Insert the rope ends and interconnecting	19
7	Netting hang up and span	21
	7.1 Netting hang up with height adjustment	21
	7.2 Insert vertical strut (conjunction)	21
	7.3 Insert side strut	22
	7.4 Attaching the rope bag.....	23

- 8 Montage Footboard (optional) 23**
 - 8.1 Insert vertical strut 24
 - 8.2 Insert side strut 24
 - 8.3 Adjusting the foot part 25
 - 8.4 Mounting of the foot 26

- 9 Usage of your BABYSCHWINGER/ KINDERSCHWINGER 26**
 - 9.1 Maintenance 27
 - 9.2 Cleansing 27
 - 9.3 Washing instructions 28
 - 9.4 Adjusting the seat height 29
 - 9.5 Adjusting the seat position 30
 - 9.6 Sitting, feel comfortable and getting up 30



**IMPORTANT! Read carefully!
KEEP FOR FUTURE REFERENCE!**



*The first step
in a dreamlike life*

Strange in the world of adults, just missing babies in the first months many familiar from the mother's belly movements. In BABYSCHWINGER Experience familiar: Swinging movements in which the little ones gently slip into in new dream worlds.

The gentle rhythm of circular or spiral vibrations leads to a feeling inner peace, and provides a natural way for the breakdown of Stress. If the energy flow harmonized, act the swinging movements holistically relaxing - decrease restlessness, crying behavior, irritability or sleeping problems.

This manual will give you the installation and explains the usage of a baby swing. The different sizes of the models are construction equal, so will be the individual steps of the example of the model L illustrated.

SAFETY NOTICE

Please make sure that all packaging removed and keep this away from your child. Use only tested by us and recommended accessories and spare parts.

Our TRAUMSCHWINGER - hanging chairs are resting and relaxing furniture. They are not for using as trainers or play area. If you notice damage of the material (e.g. cracks), the product may not more be used. A cloth at least must place, when an infant or toddler in the netting placed. Children not allowed unsupervised use of the furniture. Carefully observe further Notice and safety instructions in this manual, and keep them for possible questions. Follow exactly the instructions in order to avoid may cause dangers due to incorrect installation. The mounting should carry out by an adult. Suspension and height adjustment are be regularly checked for tightness.

In all one dot suspension needs to use a swivel or similar to avoid shear stresses may act on the suspension. Our stainless steel hangers with integrated plain or ball bearing make the use of an additional rotating vortex unnecessary.

WARNING

The child must always supervise!



Always make sure that sufficient space freedom!

The Baby Hammock is no rocking!

It can cause hazards, if the instructions, information, warnings and instructions not respected in the manual!

2 BABYSCHWINGER/ KINDERSCHWINGER

With these models, you should adjust the height of the baby swing so that your child can swing freely just above the ground. In addition, it's recommended interpreted the ground with a damping material (1.5 m wide). Note that hanging chairs are not a cradles rocking or any toys equipment. Always stow the ropes in the rope bag, so that they are not reachable for children. Regularly check attachment, suspension and ropes for wear.

SAFETY NOTICE

Do not allow children in the models unattended and let small children unsupervised play nearby. If an infant or infant is placed in the netting, has an at least Cloth be placed. The products may not use, if one part is broken, torn, or missing. You may not near open fires or other sources of intense heat such electrical heaters, gas ovens, etc. hanging.

2.1 BABYSCHWINGER


While the models M to XXL essentially differ only by the size, has the baby chair swinger a separate web form. Headers- and foot side of the net pulled up to secure your child against a falling out.

The BABYSCHWINGER is suitable as a baby crib from the 1st day.

SAFETY NOTICE

Use the optional except MIRA - ART futon, no additional mattresses or pillows.

If the child sit up, kneel or pull itself, May no longer the baby chair be used as infant cot.

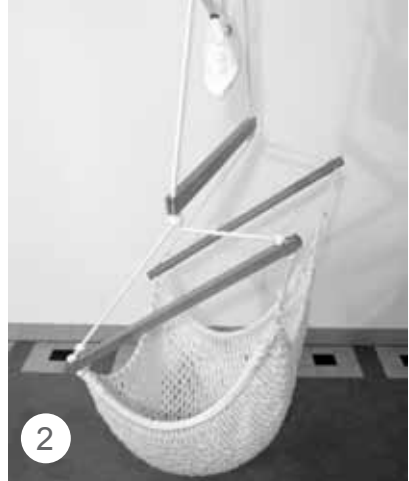

Then operate it by simply into a children high chair by changing the side woods. The necessary position of the side wood in the second pix illustrates. As high chair for children, the baby chair swing is suitable up to about 5 years.

2.2 KINDERSCHWINGER

CHILDREN'S CHAIR is suitable for children from 3 to about 10 years old.



It is optionally available with a separate foot part.

3 Prerequisites

For your BABY SWING or CHILDREN SWING you need your building conditions and use wishes adequately secured. You can directly through MIRA - ART the standard fixings for our products receive - we will gladly advise you.

Basically, you have the choice between a ceiling mounting, attachment to a beam or the use of a stator. Take attention for the respective weight if you are purchase the attachment for the baby or children swing. With a ceiling mounting, verify that the suspension of the nature of your ceiling (e.g. concrete) is suitable. Check with your dealer or hardware store, what kind of attachment you can use for your structural circumstances.

Following table shows the model-dependent values for the suspension:

Net/ Model	Suspension hight (min./max.)	Load max.	Wall distance-min.
Babyschwinger	1,8 m / 4,0 m (als Kindermöbel 1,2 m / 3m)	75 kg	65 cm
Kinderschwinger	1,5 m / 3,0 m	75 kg	65 cm


Before you start the assembling of BABYSCHWINGER or TRAUMSCHWINGER, you must complete the installation of your chosen mounting. Take attention to this proper execution of the installation according to the instructions for the respective fixing.

SAFETY NOTICE

Check the attachment regularly for tightness and damage! For damages caused by an improper or loosened fixing based, no liability assumed. To avoid damage, please pay attention for your suspension that your hammock chair not scrubs along on ceilings or walls..

4 Individual Parts


For an overview of the delivery of BABYSCHWINGER/ KINDERSCHWINGER you get in the two following pictures and tables.

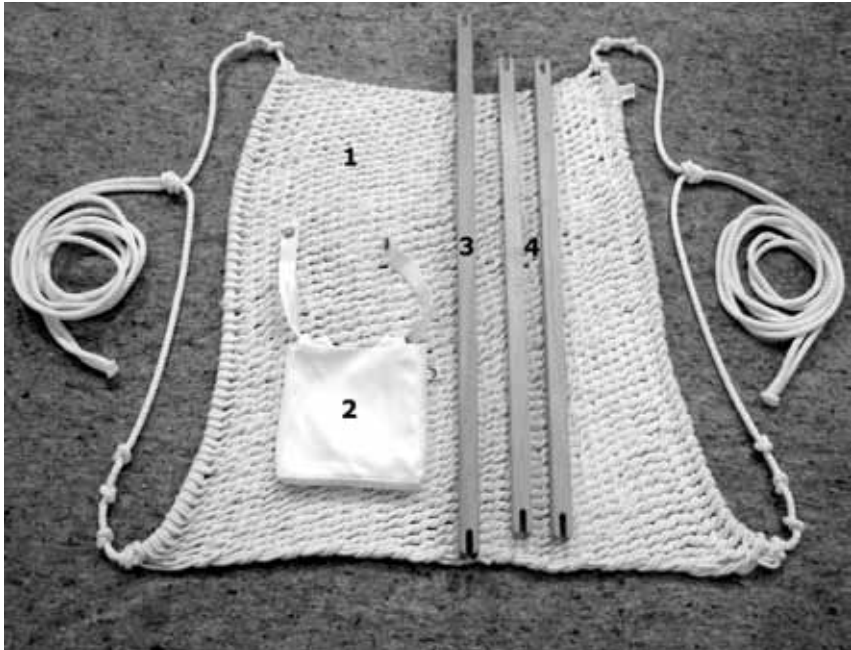

- | | |
|----|---------------------------------|
| 1) | Weaving net in cotton |
| 2) | Rope bag universal ² |
| 3) | Wooden transverse strut |
| 4) | Wooden side strut, 2 piece |

² Only deliverable in versions: „Set“ or „Set Plus“

All items shown on this page are only included when you buy a TRAUM-SCHWINGER in the version „Set“ or „Set plus“. For the others versions this can be purchased as an accessory item.

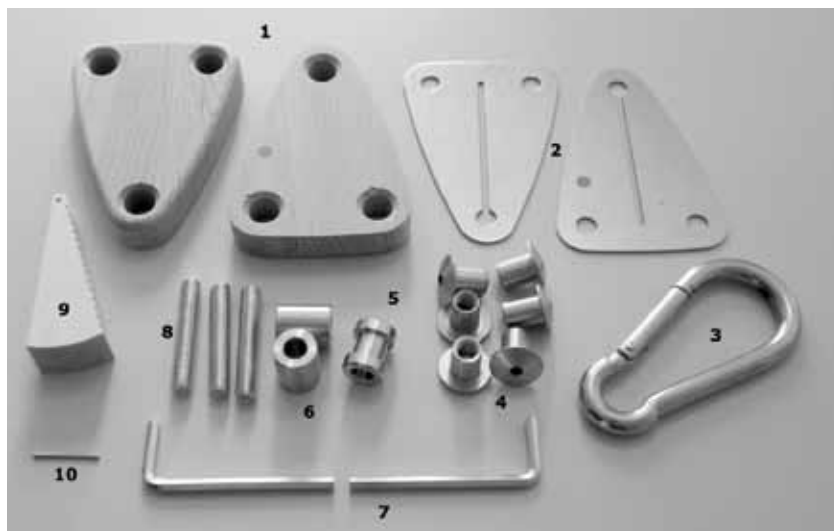

- | | |
|-----------------------------|----------------------------|
| 1) Holzwange (x 2) | 6) Edelstahl-Buchse (x 2) |
| 2) Edelstahl-Einleger (x 2) | 7) Innensechskantschlüssel |
| 3) Karabiner | 8) Gewindestange (x 3) |
| 4) Rundmutter (x 6) | 9) Holzkeil, 9mm |
| 5) Edelstahl-Buchse mit Nut | 10) Stahlstift |

NOTE

All the parts will be cleaned at the end of the production process. Furthermore, we recommend that you manually clean certain parts to exclude contamination of cotton ropes. With a dry cotton cloth, clean the openings in the wooden poles to remove sanding dust residues. With a moist cloth and a little detergent, clean the following rope metal parts of the height adjustment: the three stainless steel sockets and the non-colored with a sticker marked sides of the two stainless steel inserts.

5 Assembly of the height adjustment

The first portion for mounting your TRAUMSCHWINGER (dream swing) forms of assembling the supplied height adjustment. For this, you need the items from the box of height adjustment and the swivel. The required tool (an Allen key) is enclosed. The mounting of the height adjustment can most easily do, if you are sitting at a table.

5.1 Prepare the threaded rods



Some metal parts are to check the threaded pre-assembled. For the assembly you must first all of them disassemble. Take the three pre-threaded rod's unscrew each one of the round nuts and remove the respective stainless-steel socket down of the threaded rod. The ring nut, which remains on the threaded rod, screw tightens. Now you have three threaded rods, to each of which a round nut screwed.

5.2 Insertion of threaded rods (1)



Take now one of the triangular wooden cheeks, which have one side a colored sticker marks.

That is the inside of the cheek.

Hold it with one hand, and the side with the sticker marked facing downward. With your other hand stuck through in each of the three holes a threaded rod with a round nut.

5.2 Inserting the threaded rods (2)



Now place the free hand on the three round nuts to prevent it from slipping and rotate with your hand the wooden cheek. The side with the colored sticker is facing now to you. Place the wooden cheek in front of you, which is lies on the round nuts now. The threaded rods face upwards.

5.3 Attach the first stainless steel inlays



Take one of the stainless steel inlays. A colored sticker marks the side of the stainless steel inlays, which should attach with the inside of the wood cheek.

Grasp the stainless steel inlay so, that gave the side of the sticker facing downward, lead over the threaded rods and place it on the wooden panel. With colored label marked side of the stainless steel inlays is now placed on the with colored sticker marked side of the wood cheek.

SAFETY NOTICE

It's imperative that with colored stickers marked sides of the wooden panel and the stainless steel inlays lie on each other. This provides that only the rounded edge of the stainless steel inlays contacted with the supporting ropes. Failure to comply these installation instructions may increase wear of the supporting ropes.

5.4 Attach the stainless steel bushings



On the threaded rod, into the top of the triangular, wooden panel insert the stainless steel socket with a groove. On the two threaded rods at the short side of the triangular wood cheek insert now the stainless steel sockets (without groove).

5.5 Inserting the steel pin into the wooden wedge



Now take the wooden wedge and the steel pen into hand. Run the steel pin through the hole in the extent of the wood chisel uniformly, that on each side of about 2 mm protrudes.

5.6 Placing the wood wedge over the stainless steel inlay



Place now the wooden wedge, which is inserted already with the imported steel pin with smooth sides on the already mounted stainless steel inlay. Place the wooden wedge so, that the protruding steel pin in the slot of the stainless steel inlay must perform.

5.7 Attach the second noble steel inlay



Take the second stainless steel inlay in your hand. Grasp the stainless steel inlay so, that with the label marked side facing upward. Run the stainless steel inlay on the threaded rods and place it on the stainless steel bushings. Make sure that the steel pin in wooden wedge also performed in this second slot of the stainless steel inlay. It must be Ensure!!

SAFETY NOTICE

It's imperative that with colored stickers marked sides of the wooden panel and the stainless steel inlays lie on each other. This provides that only the rounded edge of the stainless steel inlays contacted with the supporting ropes. Failure to comply these installation instructions may increase wear of the supporting ropes.

5.8 Attaching the second wooden panel



Take the second wooden panel. With a colored sticker marked side of the wooden wedge must lie on the second stainless steel inlay with a color sticker. Grasp the second wooden panel so, that the sticker marked side facing downward. Run the wooden panel on the threaded rods and place it over the stainless steel inlay. With colored sticker marked side of the second wooden panel is placed now on the colored label marked side of the second stainless steel inlay.

5.9 Screw down and tighten the round nuts



Now screw the three remaining round nuts with the three threaded rods, which are placed in the holes of the second wooden panel. As tool you can also use the Allen key from the delivery. Finally drag every six round nuts tightly. In front of you is now the fully assembled height adjustment for your BABYSCHWINGER/ KINDER-SCHWINGER.

SAFETY NOTICE

During use is a possibility that the round nuts loosen. Regularly check the tightness of the round nuts and drag them firmly with the supplied Allen key. In case the round nuts loosen, the space between the metal components can cause metal abrasion, which possibly can stain cord.

5.10 Insertion of the carabiner



Take the supplied carabiner and place it in the stainless steel bush with the groove (on the upper side of the height adjustment).

5.11 Finished height adjustment




Please use both supplied Allen keys to make sure that all metal parts are properly tightened. Please make sure to check these metal parts every time when using the BABYSCHWINGER/ KINDERSCHWINGER.

6 Connecting the netting with the height adjustment

Next you connect the netting of your BABYSCHWINGER/ KINDERSCHWINGER with the height adjustment. Due to the fact that you have to spread the netting in front of you, we recommend you put a blanket on the floor. The height adjustment you should place next to you. This will help you with the next steps.

6.1 Spread netting

Take the rolled netting and unroll it. Loosen the by knots fastened cloth bag with the wooden crossbars as well as the two page woods off the netting. The cloth bag may be put aside, since you need the timbers only in the next section. The best way to spread the netting is, when you raise it once completely with your hands. For this, take one of the two connection knots in each hand and lift the net completely in to air. That netting will rotate itself into the correct position. You just need to return it flat on the floor in this position.

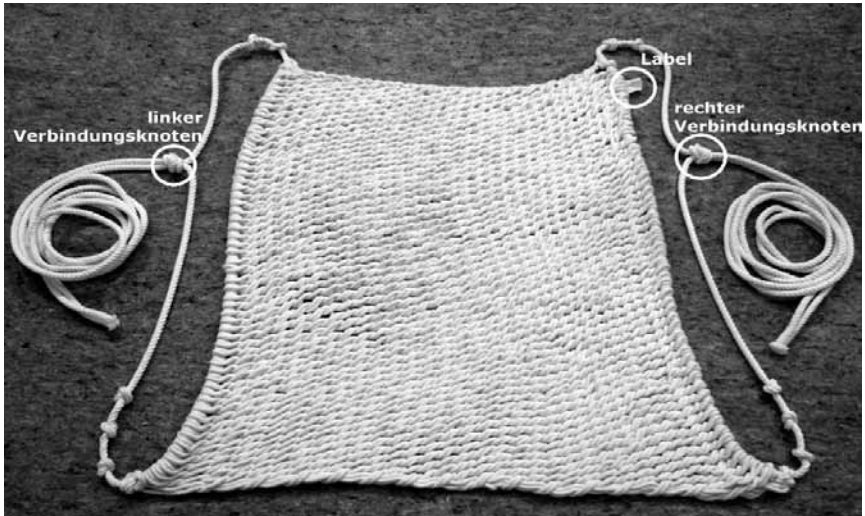

For the next steps you need to make sure that the netting is aligned rightly on the ground. This is indicated by the position of the Netting attached labels. When the label is on the right top side of aligned netting in front of you, then it lies in the proper position. If the label is not in this position, rotate or apply the netting accordingly.

6.2 Insert the rope ends and jam them


On delivery, the track ropes can be twisted in themselves and each other, because of material and manufacturing conditions. Prior to inserting the rope ends in the height adjustment, you need to make sure that the support ropes are not twisted in itself and into each other.

SAFETY NOTICE

In case the suspension ropes are inserted into the height adjustment twisted in itself or into each other, this may increase the wear of the ropes through damage to the rope surface.

Start at the left side to align the carrying ropes without twisting. Take the left connecting knots into your left hand and lift this to the extent that the two ropes are easily clammed to the corners of the netting. Turn the connecting knots in your hand in a way that the two ropes from the connection knots avoid to overlap one another. (See the following two pix).

RIGHT

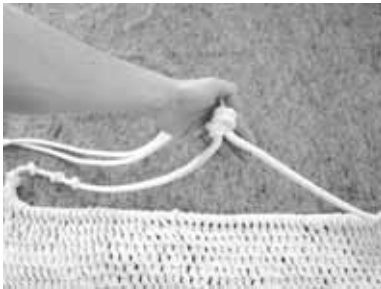

WRONG



If the left connection knot is in this position, take the one from the knot running rope pair between your thumb and forefinger of your right Hand (see next figure).



Now drag with your left hand the rope pair trough the right hand, without to twist the ropes. If you reach the end of the rope, grab around. Hold the end of the rope pair with your left hand so tight, that it does not twist again.



Now take the height adjustment so in your right hand, the wood wedge almost half inserted into the height adjustment. Insert the end of the rope pair as the left stainless steel bushing of height adjustment, that two ropes side by side laying on the stainless steel bushing.



Lead out the end of the rope pair between this bush and the wooden wedge from the height adjustment. Drag now on this rope pair that it's hanging out about 40 cm from the height adjustment. Place the height adjustment on the netting, which is pulled on the left side rope.



Now take the right connection node in your right hand and proceed on this side as well as on the left side. If you also have led the right pair of ropes through the height adjustment, press the wooden wedge into the height adjustment. This fixed the ropes in the height adjustment.

7 Netting hang up and span

In this section you will finished assembling your BABYSCHWINGER/ TRAUMSCHWINGER. For this you will need the height adjustment connected with the netting, the vertical wood and the two side wood, the rope bag and a ladder.

7.1 Netting to hang up with height adjustment



Hang the connected height adjustment with the swivel into the prepared (resp. existing) suitable attachment (see chapter 2 Prerequisites). The following figure shows an example of a mounting in a wooden beam.

Safety note

Regardless of the type of mounting this has to be regularly checked for tightness and wear!

7.2 Querholz einsetzen



One of the supplied wooden struts is longer than the others. This is the vertical wood (conjunction) NOTE:

For models XXL and XXL extra large all wooden struts are of same length. You will recognize the vertical strut since it is thicker than the two of the other woods.

Take the vertical wood and run the respective rope pair just above the connection knots in the recesses of the vertical wood. Take care that the ropes, which are running out of the bottom of the connection knots, do not overlie one another or are twisted! Turn the connecting knots in your hand so, that the two ropes run freely to back and front (see the two Pictures on the following page). Press the rope pair all the way into the recess of the vertical wood (conjunction).



RIGHT



WRONG

SAFETY NOTICE

If the suspension ropes lay on each other or are twisted, this can increase wear of the ropes through damage to the rope surface. Do not use sharp objects to the rope pair to push into the recess. This may damage the surface of the rope, and can interfere with the carrying capacity of the cables.

7.3 Insert side strut



In order to facilitate the insertion of the side woods, set yourself for 2 minutes into the netting to stretch the cotton (even in the M models and baby vibrator).

This is also good for the netting to give its comfortable shape after the first unpacking. After getting up take the two side woods and plug them on both sides along the seat surface between the existing knots above the netting. Press the suspension ropes all the way in the recesses of the side woods. For information of adjusting the seat height see the chapter „Using your BABY-SCHWINGERS/ KINDERSCHWINGER“.

SAFETY NOTICE

Do not use sharp objects to the rope pair in order to push it into the recesss. This may damage the surface of the rope, and can interfere with the carrying capacity of the cables.

7.4 Attaching the rope bag



As a final step you bring the rope bag between the two rope pairs above the cross of wood. Hang on the universal case with the two adjustable straps. For the motive bags (sun and sheep) you should made a knot in order to attach the cords. Then stow ropes and the possibly end of the rope of the foot part in this pocket.

SAFETY NOTICE

The storage of the ropes is for your safety. Due to the fact that the ropes are in the bag, an accidental release of the height adjustment cannot occur.

8 Assembly of foot part (optional)

In this section we show you the installation and mounting of the foot part of your TRAUMSCHWINGER. Since you have to spread the netting in front of you, we recommend you put a blanket on the floor. Put the foot bundle in front of you and unwind the cord of the foot bundles. Then loosen the cotton bag with the timbers from the netting.

Note

All the parts will be cleaned at the end of the production process. In addition we recommend that you manually clean certain parts to avoid contamination of cotton ropes. With a dry cotton cloth, clean the openings in the wooden poles to remove sanding dust residues.

8.1 Insert vertical strut (conjunction)

Spread the netting in front of you so, that the label is in the upper right corner. One of the supplied wooden struts is longer than the other two. This is the vertical conjunction wood.

RIGHT



WRONG



Ensure that the ropes running down from the connection knot are not aligned or twisted! Turn the connecting knot in your hand, if necessary, so that the two ropes lie freely forwards and backwards (see figure). Take the wooden cross and run each cable pair just above the connection knot (below the wrapped rope end) into the recesses of the vertical wood.

SAFETY NOTICE

If the suspension ropes lay on each other or are twisted, it can increase wear of the ropes through damage to the rope surface. Do not use sharp objects in order to push the rope pair into the recess. This may damage the surface of the rope, and can interfere with the carrying capacity of the cables.


8.2 Insert side strut

In order to easily install the insertion of the side woods, stretch the two short sides of the cotton network vigorously. This is also good for the netting to give its comfortable shape after the first unpacking. Then hold down the ends of the net and pull vigorously on each node above the net.




After stretching, take both side woods and stuck them both on sides along the netting surface and **between** the existing knots above the net mesh. Push the supporting ropes all the way into the recesses of the side wood.


8.3 Adjusting the foot part

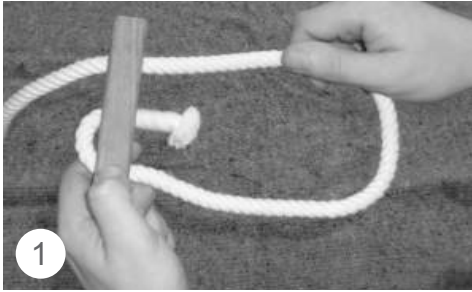


Take the rope as in Fig. 1, and pull a loop of approximately 50 cm in length (depending on the mounting height of the hanging chair).

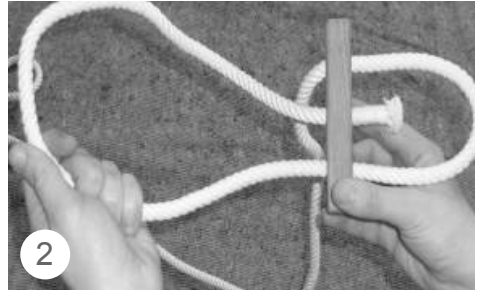


Following pull the rope on the other side.

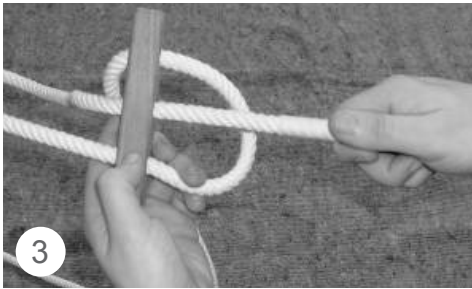

Pull on the rope end as shown in FIG. 3

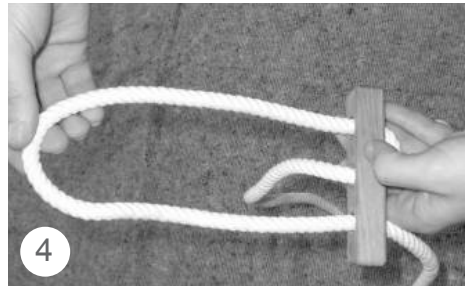


te: You can adjust the length of the rope by changing loop size. Please make another loop as shown in Fig. 1

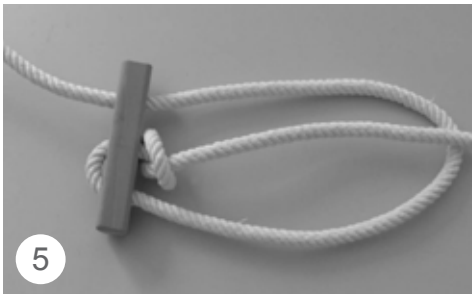

As a final step, please make with the rope end a security knot directly behind the height adjustable footrest.

8.4 Assembly of the foot part

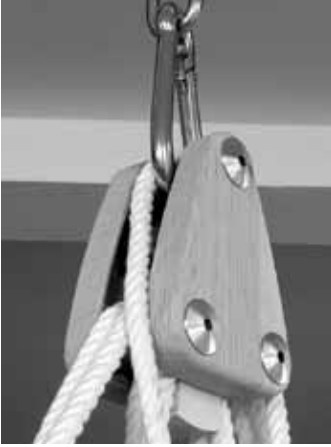

Place the loop behind the carabiner on the groove connection. If you have no height adjustment, put the loop of the foot part simply in your carabineer.

Note

With the height adjustable footrest you can easily adjust the height with only a few grasps. In order to let the foot part down slide the height adjustable footrest upward. To lift up the foot part, slide the height adjustable footrest downward.

Note

With foot height adjustment you change with few handles quite simply the height of the foot part. To let down the foot part, push the foot height adjustment upwards. For pulling up the foot part you push down the foot height adjustment.

9 Usage of your BABYSCHWINGER/ KINDERSCHWINGER

You will find in this section various information about usage and maintenance your BABYSCHWINGERS/ KINDERSCHWINGERS.

SAFETY NOTICE

If you notice damage of the material (e.g. cracks), the product may not be used anymore. When an infant or toddler is placed in the netting, a cloth must be placed underneath at least. Children's are not allowed unsupervised use of the furniture.

9.1 Maintenance

The natural materials used for the BABYSCHWINGER/ KINDERSCHWINGER (wood and cotton) are untreated and ideal for indoor use. For outdoor usage it should be noted that the untreated materials are not durable and moisture are weather resistant. Avoid that the netting and the untreated wood are exposed to humidity and rain. We recommend that you remove the hammock chair and optionally place it to dry in a warm, ventilated place. To take care of the wooden parts (wooden wedges of height adjustment, vertical and side woods) we recommend from time to time a treatment with linseed oil varnish.

You also can provide the wooden pieces with a wood preservative or customize colors. Make sure that the recesses of the lateral and side woods remain free of boiled linseed oil, wood preservatives color. Otherwise, it may later come to abrasion by contamination of the suspension ropes.

Note

These wood we are using is of high quality, carefully controlled material. Since it is a natural product, the wood may have hidden defects, which can in rare cases lead to breakage.

We will replace wood weaknesses breaks within a period of 2 years from date of purchase. Damage to the rope surfaces are at an early stage to reported as damage to the repair to permit under warranty. Loosening and moving the existing knots performs well invalidate the warranty, as overuse and improper use.

9.2 Cleansing

For light soiling, we recommend to dry the contaminated sites (bone dry!) and remove the dirt with a coarse brush. For greasy dirt, the affected area should selectively be cleaned with vinegar water or mild soapy water. Strong contamination can be washed out by hands, e.g. gall soap. At large-scale pollution, the netting can also be cleaned in the washing machine (see Washing instructions).

9.3 Washing instructions

Prepare:

First, remove the lateral and side struts and take out the TRAUMSCHWINGER. Loosen the netting of the height adjustment. Spread the netting and lay the track ropes curled up on the netting. Fold the netting so that the support ropes are completely enclosed with the netting. Put this net bundle into the washing drum. Please note, depending on the size of a washing machine the netting with suitable capacity is required (e.g. weight XXL netting approx 7.5kg)

Washing:

Select the full wash cycle at 40 ° C and max. 1200 rev/ min at spinning. Use a bleach free detergent and no fabric softener.

Note: The best washing results, we as a manufacturer of ecological have scored toiletries **W. ULRICH GmbH**. Our recommendations: detergent with soapwort extract, lanolin wool rinse, stain remover. To buy these products, feel free to contact us. The detergent you use just after the dosage instructions on the bottle. As a care additive, we recommend the addition of 10 ml lanolin wool flushing, to obtain the softness of cotton. If your water is very hard, you can use up to 30 ml descaler to reduce the degree of hardness and to receive a softer result. In highly polluted netting, you can use stain remover in the salt compartment of your washing machine, to improve the cleaning result.

Drying:

The cotton is not suitable for tumble dry using. You can dry the netting quickly in a warm and well-ventilated place. Do not dry out in cloudy weather conditions. The netting may only be used again, if it's thoroughly dry. Through the water, the fine surface fibers adhere to each other. To restore the original fluffiness of the deck surface, you can use a medium hard clothes brush to treat. A brush made of pure horsehair is best for this purpose.

After washing



After brushing



After drying and brushing the cotton hang your TRAUMSCHWINGER, as it is described in the manual.

Note: The TRAUMSCHWINGER, is designed as relaxing furniture and a furniture is unsuitable according to a common full laundry.

9.4 Adjusting the seat height

With the height adjustment, you can personally setting the optimum seat height of your TRAUMSCHWINGER. We recommend to adjusting the seat height so, that the bottom edge of the netting rests in the knees when you are under the suspension point. To adjust the height you access with each of your hand the rope pairs below the height adjustment. With a short pull straight down to release the lock.

To make the TRAUMSCHWINGER position deeper, take your hands with the ropes shoulder wide. Let the ropes smoothly glide, until the desired height has reached. Now take your hands back together and let the rope go. Of the wooden wedge in the height adjustment jammed so the ropes in the desired position.

To make the TRAUMSCHWINGER higher, pull down the ropes. When the desired height has reached, release some of this rope. The wooden wedge in the height adjustment jammed so the ropes in the desired position.

SAFETY NOTICE

Always keep both rope pairs tightly when adjusting the seat height. Result of one sided pulling a rope pair, can be slippage of the other cable pair. Do not adjust the seat height while using the TRAUMSCHWINGER by yourself or someone else. Adjust not too high, otherwise a fall hazard. For babies and infants you should hang the cot or the hammock chair as low as possible and for security reason place a mattress or a pillow under it.

9.5 Adjusting the seat position

You can change the angle of inclination of the seat position. The plug-in system allows you different variations between a more up right seated and a more lying posture. To change the angle of inclination, change the side woods, located between knot and rope sections. Your sitting position will be more upright, if you insert the side woods more steep. Make sure both side woods set in the same manner.

9.6 Sitting, feel comfortable and getting up

If you want to sit down, take the netting with the front seat in your knees and take place in the TRAUMSCHWINGER In Model XXL also your legs will placed. To get comfortable with the whole body is to lay down position in the TRAUMSCHWINGER XXL, you gather about 1/3 of the netting in to your knees and then sit down. So you only need to take your legs up to lie in the netting. To get up you move in your hammock chair two steps backward and stand up. Please note that while sitting down and standing up you are not pulling the side woods support or pull out of the hammock chair on the upper cross wood.

Enjoy...



For your notes

MIRAART® GmbH

Bünderstraße 21
33613 Bielefeld

fon: +49 521 66545
mail: info@mira-art.de

web: www.mira-art.de
shop: www.traumschwinger.de

