


Montageanleitung BounceCloud

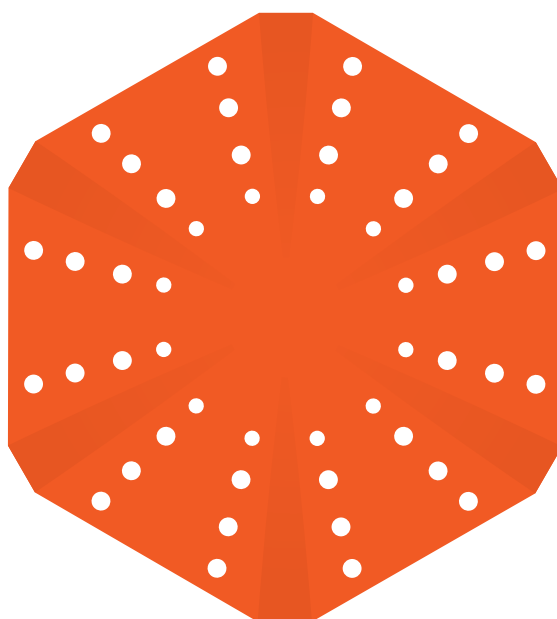


BounceCloud (Art.-Nr. 93002; 93020; 93021)

Fundament für BounceCloud (Art.-Nr. 93100)


Allgemeine Daten	2
Wartungsempfehlungen	3
Mehrfachanordnung	4
Montageanleitung - ohne Fundament.....	5
Montageanleitung - mit Fundament	6
Montageanleitung - Steckverbinder	8

Allgemeine Daten

Art. Nr.	BounceCloud Modelle
	Rahmen 100 x 90 x 16 cm, Gewicht 25 kg
93002	Sprungtuch: orange
93020	Sprungtuch: grün
93021	Sprungtuch: gelb

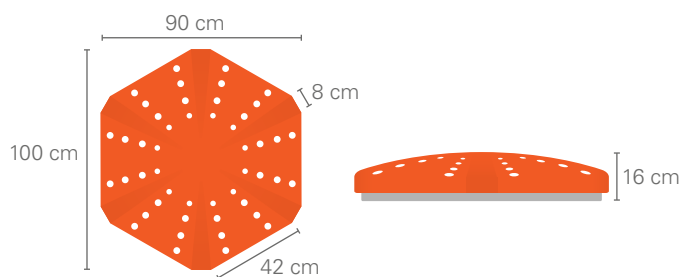

Art. Nr.	Fundament für BounceCloud - optional
	Randmaße: 97,5 x 87,5 x 8,5 cm, Gewicht: 120 kg
93100	aus Beton, inkl. 12 x Sechskantschrauben und 3 x Ringschraube

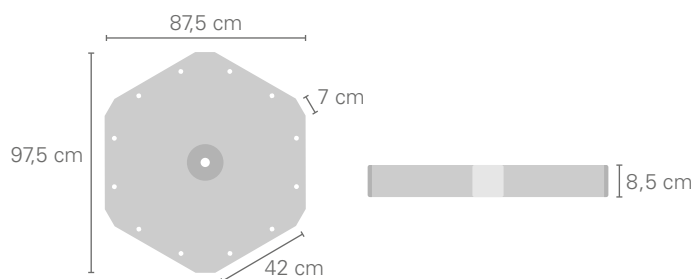

Gewicht Fundament + BounceCloud: 145 kg

Zusätzlich benötigtes Material (nicht im Lieferumfang enthalten)

- Arbeitshandschuhe;
- Stift + Tieflochmarker;
- Bohrhammer;
- Befestigungsmaterial M12 - je nach Untergrund.

Zusätzlich benötigtes Material (nicht im Lieferumfang enthalten)

- Arbeitshandschuhe;
- Split 0,8;
- Materialien um das Fundamentloch zu graben/ auszuschneiden.

Anzahl der Nutzer


Die BounceCloud ist Spielplatzgeeignet nach DIN EN 1176 und darf nur durch eine Person zur selben Zeit benutzt werden. Weitere Personen sollten sich daher nicht auf der BounceCloud aufhalten. Die Nutzung der BounceCloud ist nur unter Aufsicht erlaubt.



Spielplatzgeeignet
nach DIN EN 1176

Aufbau: Personenanzahl

- Wir empfehlen die BounceCloud zu zweit aufzubauen.

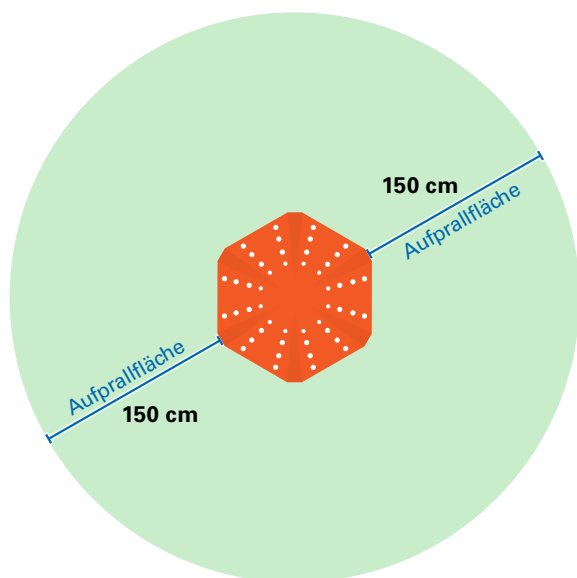


Sicherheitsbereich und -abstände

Oben: Über der BounceCloud sollte mindestens ein etwa 3,50 m freier Raum sein (keine Äste, Stromleitungen usw.).

Seitlich: um das Gerät herum muss allseitig noch eine Aufprallfläche von mindestens 1,50 m vorhanden sein.

Achtung: Die BounceCloud darf nur in eine ebene Fläche eingebaut werden und keinesfalls an einem Hügel, einer Steigung oder einer Hangkante.



Wartungsempfehlungen

Die BounceCloud ist immer vor Gebrauch auf mögliche Beschädigungen zu untersuchen. Insbesondere ist darauf zu achten, dass Sprungtuch und Rahmentteile keine Beschädigungen aufweisen. Schäden sind unverzüglich zu beheben. Bei Zweifeln, ob das Gerät funktionstüchtig ist, ist immer fachkundiger Rat (z.B. beim Hersteller) einzuholen.

Zu überprüfen sind regelmäßig:

- Sichtbare, betretbare Oberfläche

Überprüfen Sie das Gerät vor Gebrauch und ersetzen Sie jedes fehlerhafte oder fehlende Teil. Achten Sie insbesondere darauf, dass:

- keine Beschädigungen in der Oberfläche sind;
- die Aufhängung der Oberfläche in einwandfreiem Zustand ist;
- der Rahmen keine Risse oder sonstige Beschädigungen aufweist;

Alle Ersatzteile erhalten Sie auf Anfrage bei Eurotramp.




Dieses High-end-Produkt ist höchsten Anforderungen ausgesetzt. Aus Sicherheitsgründen nur Original-Ersatzteile verwenden! Die Verwendung von Nicht-Original-Ersatzteilen kann für den Nutzer erhebliche Risiken (Unfallgefahr, technische Defekte, Verlust der Herstellerhaftung, Verlust des Garantieanspruchs usw.) bedeuten.

Mehrfachanordnung


Für den Fall einer Mehrfachanordnung der BounceClouds achten Sie darauf, dass die Geräte an ihren langen Kanten aneinander liegen, sodass kein Spalt entsteht. Die Montage jeder einzelnen BounceCloud erfolgt nach den jeweiligen Montagepfaden in der Anleitung.

Beispiele für Anordnungsmöglichkeiten:

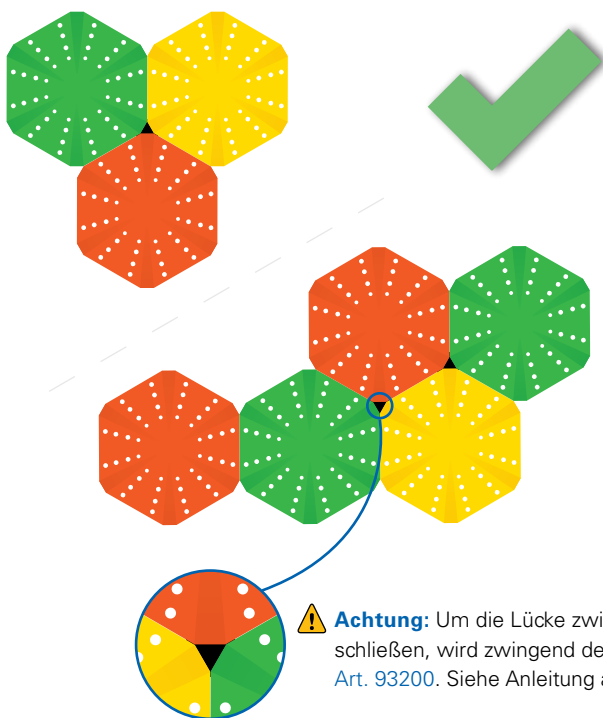


Achtung: Um die Lücke zwischen 3 BounceClouds zu schließen, wird zwingend der [Steckverbinder](#) benötigt - Art. 93200. Siehe Anleitung ab Seite 8.

Beispiel für falsche Anordnungsmöglichkeiten:

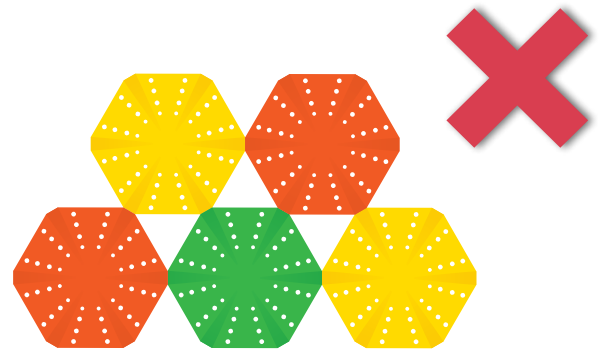


Montageanleitung - ohne Fundament

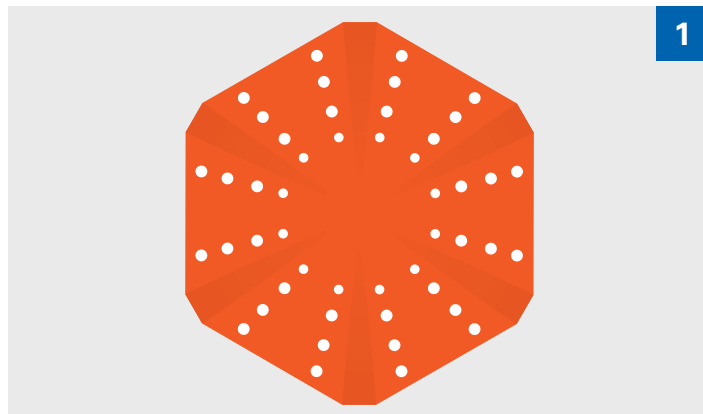



1

- BounceCloud an der gewünschten Montagestelle platzieren.
- Stellen Sie sicher, dass rund um die gewünschte Platzierung in jede Richtung 1,5 m Aufprallfläche ohne Hindernisse/Kanten ist. (DIN EN 1176 4.2.8 5.1)

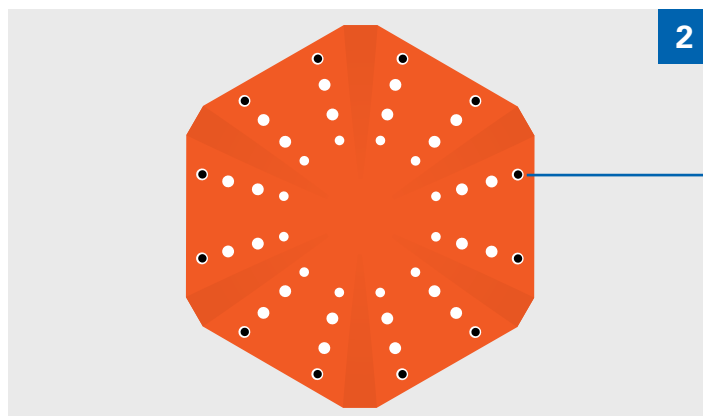

2

- Mit einem Tieflochmarker die 12 Bohrlöcher markieren.

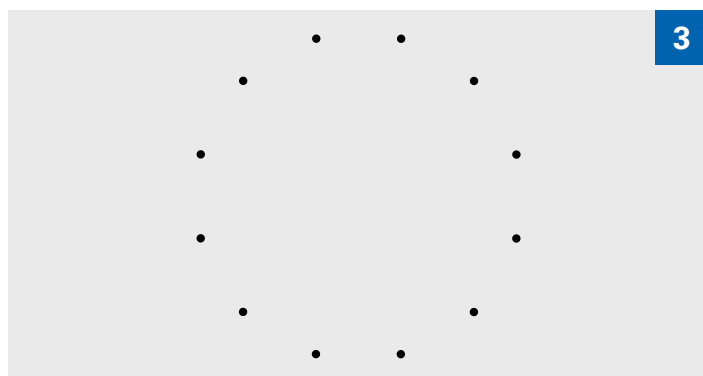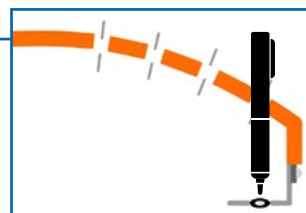


3

- BounceCloud entfernen und die angezeichneten Löcher bohren.
- Pro Seite muss mindestens 1 Schraube eingesetzt werden. Somit werden mindestens 6 Bohrungen benötigt.




- Im Fall von Mehrfachanordnung an der sich **3 BounceClouds** treffen: mit **Seite 8** fortfahren.

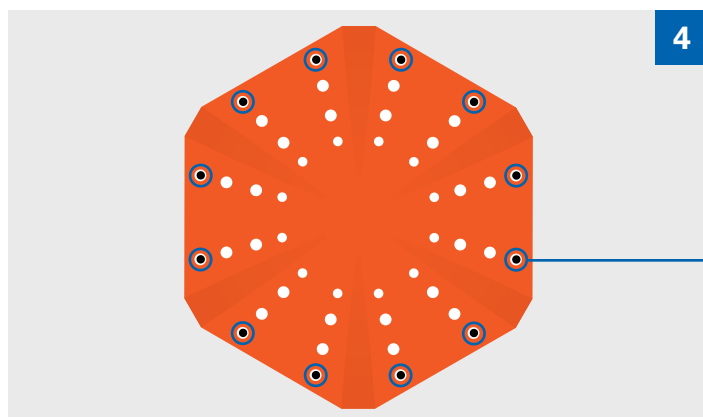


4

- BounceCloud auf die Löcher positionieren, so dass sie sich die Verschraubungslöcher mit den Bohrungen fügen.
- BounceCloud festschrauben.

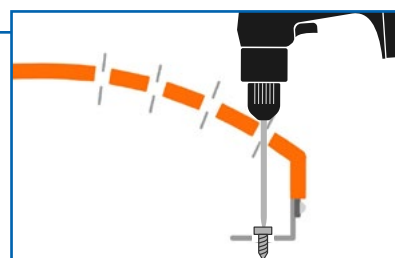


✓ Fertig!

Montageanleitung - mit Fundament

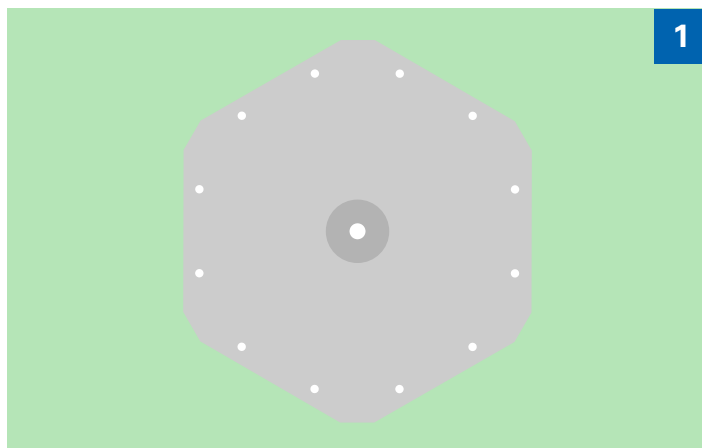


1

- Fundament auf die gewünschte Montagestelle platzieren.
- Stellen Sie sicher, dass rund um die gewünschte Platzierung in jede Richtung 1,5 m Aufprallfläche ohne Hindernisse/Kanten ist. (DIN EN 1176 4.2.8 5.1)

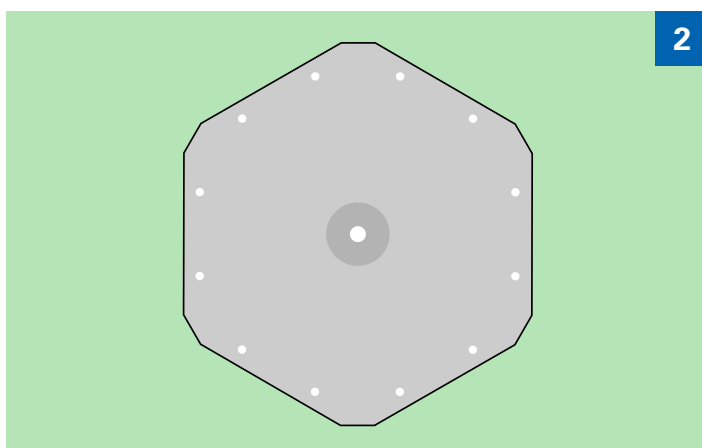


2


- Die Außenkontur des Fundaments markieren.

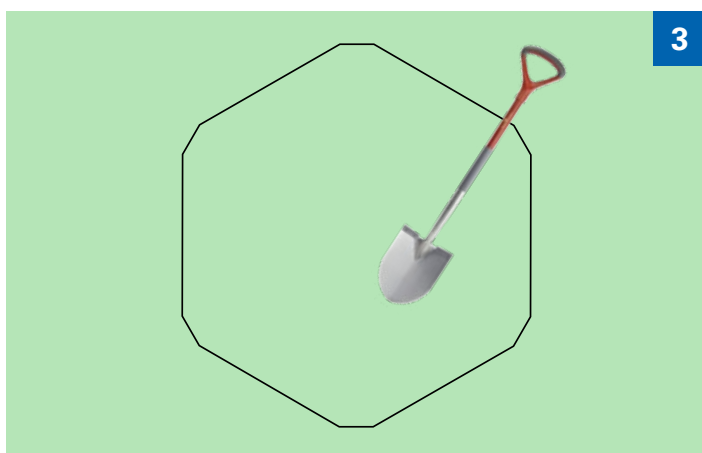


3

- Fundament entfernen und eine Grube innerhalb der Kontur mit einer **Tiefe von 25 cm** graben.
- Die Grube mit Split befüllen und planieren, so dass die restliche Grube eine **Höhe von 8,5 cm** hat.

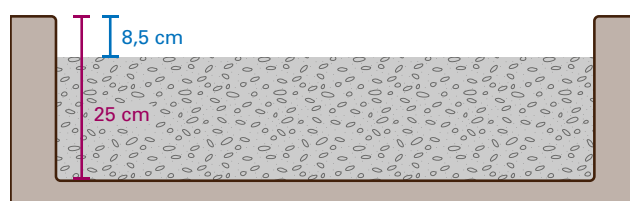

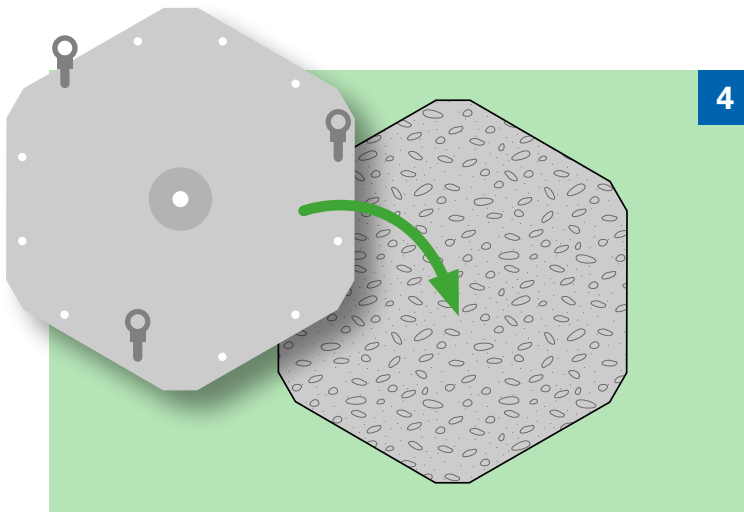


- Fundament mit den 3 x Ringschrauben in die Grube reinsetzen und ausrichten.

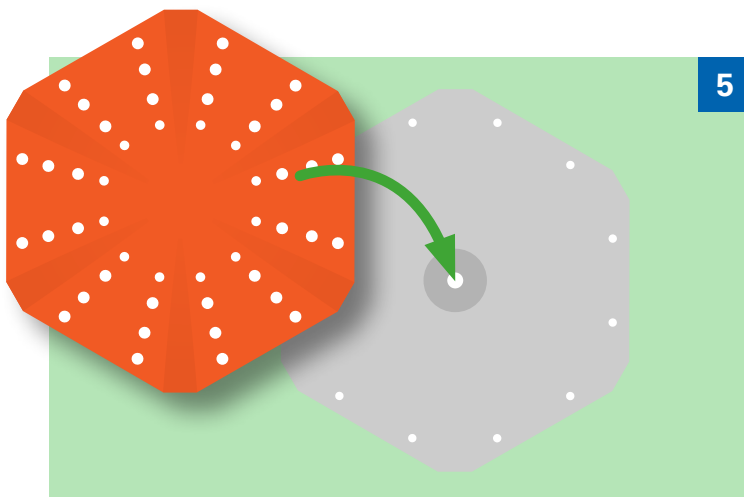


- Ringschrauben des Fundaments durch herausdrehen entfernen.
- BounceCloud auf dem Fundament so platzieren, dass sich die Löcher der Verschraubungen mit den Gewindelöchern fügen.



- Im Fall von Mehrfachanordnung an der sich **3 BounceClouds** treffen: mit **Seite 8** fortfahren.

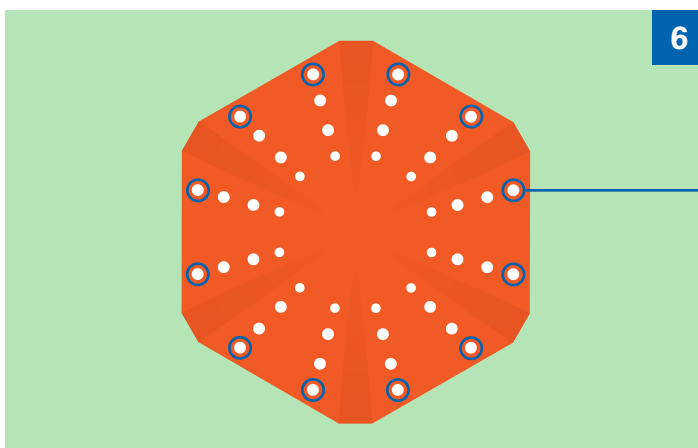


- BounceCloud mit den 12 mitgelieferten Sechskantschrauben festschrauben.

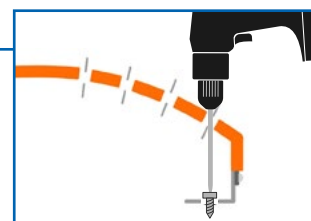


✓ **Fertig!**

Montage Steckverbinder

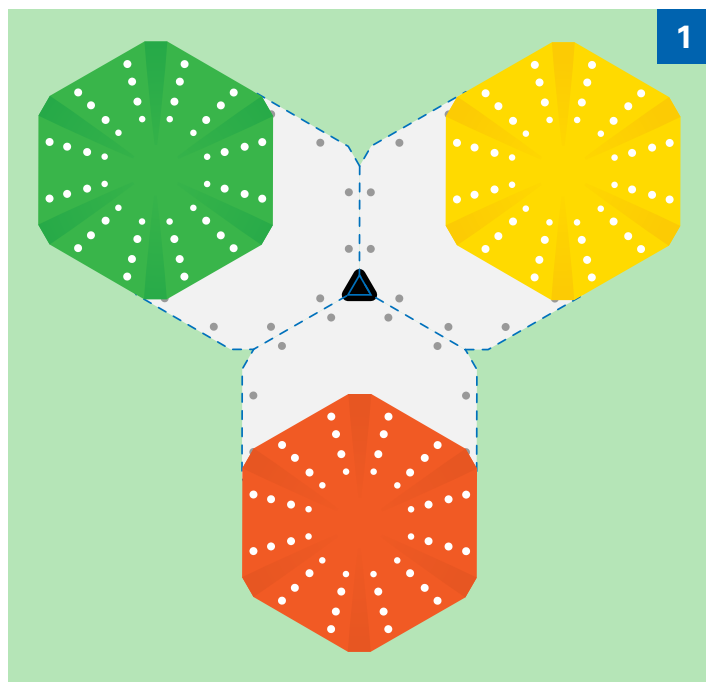
1

- Die Anbringung der Steckverbinder ist unabhängig davon, ob die BounceCloud mit oder ohne Fundament montiert wird.
- Den Steckverbinder an der Stelle positionieren, an der sich die 3 BounceClouds treffen werden, anschließend die BounceClouds an den vorgesehenen Stellen platzieren.

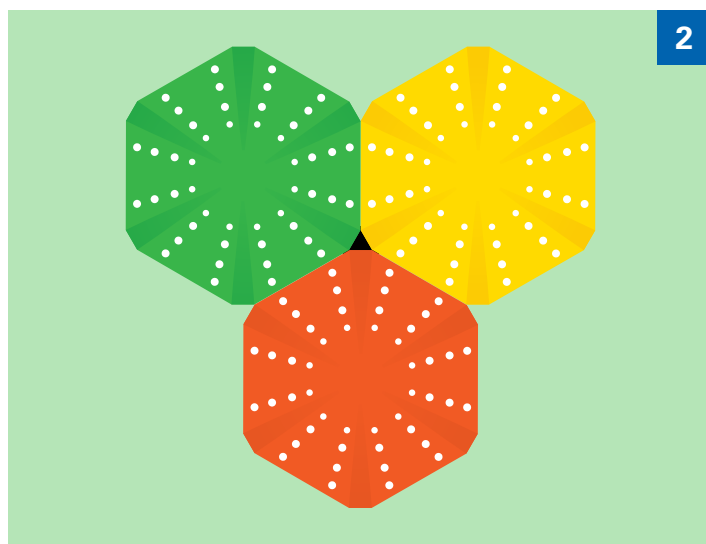
2

- BounceClouds befestigen wie in der Montageanleitung in Schritt 4 - Montage ohne Fundament, bzw Schritt 6 - Montage mit Fundament, beschrieben und überprüfen, ob der Steckverbinder festsitzt.


✓ **Fertig!**

Bei Fragen können Sie uns gerne jederzeit kontaktieren:

Eurotramp - Trampoline Kurt Hack GmbH
Zeller Straße 17/1
73235 Weilheim

Tel. +49 (0)7023 - 9495-0 | Fax +49 (0)7023 - 9495-10
welcome@eurotramp.com | www.eurotramp.com

Use, Maintenance and Assembly Instructions

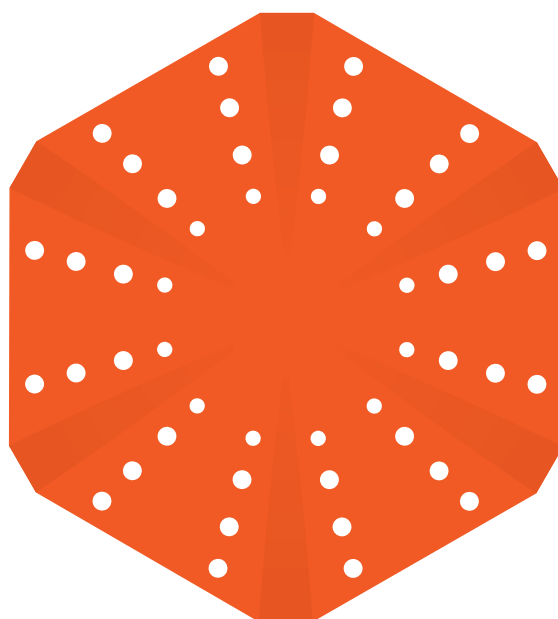


BounceCloud (Art.-No. 93002; 93020; 93021)

Foundation for BounceCloud (Art.-No. 93100)


General data	2
Maintenance recommendations.....	3
Multiple arrangement	4
Assembly instructions - without foundation	5
Assembly instructions - with foundation	6
Plug-in connector assembly.....	8

General data

Art. No.	BounceCloud Model
	Frame 100 x 90 x 16 cm, weight 25 kg
93002	Jumping bed: orange
93020	Jumping bed: green
93021	Jumping bed: yellow

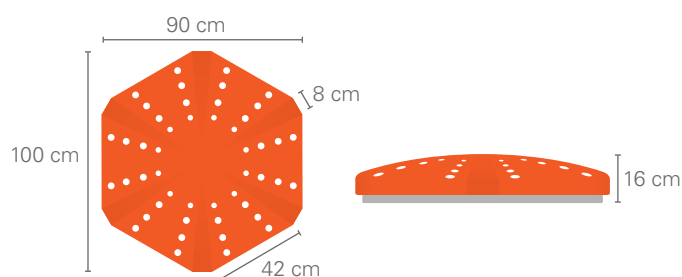

Art. No.	Foundation for BounceCloud - optional
	Edge dimensions: 97,5 x 87,5 x 8,5 cm, weight: 120 kg
93100	made of concrete, incl. 12 x hexagon head screws and 3 x eyebolts

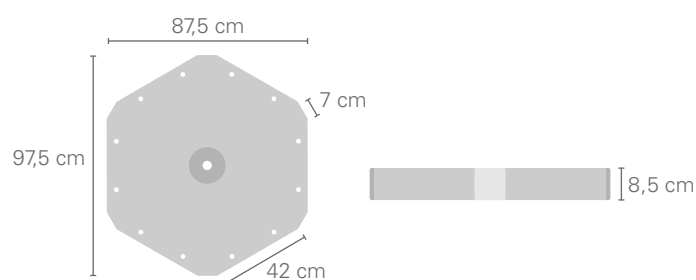

Weight of foundation + BounceCloud: 145 kg

Additional material required (not included in the scope of delivery)

- Work gloves; 
- Pen + deep hole marker; 
- Hammer drill;
- Fastening material M12 depending on the surface.

Additional material required (not included in the scope of delivery)

- Work gloves; 
- Grit 0,8;
- Materials for digging/ cutting out the foundation hole.

Number of users


The BounceCloud is suitable for playgrounds in accordance with DIN EN 1176 and may only be used by one person at a time. Other people should therefore not be on the BounceCloud. **The use of the BounceCloud is only permitted under supervision.**



Suitable for playgrounds according to DIN EN 1176

Assembly: Number of persons

- We recommend 2 people for setting up the BounceCloud.

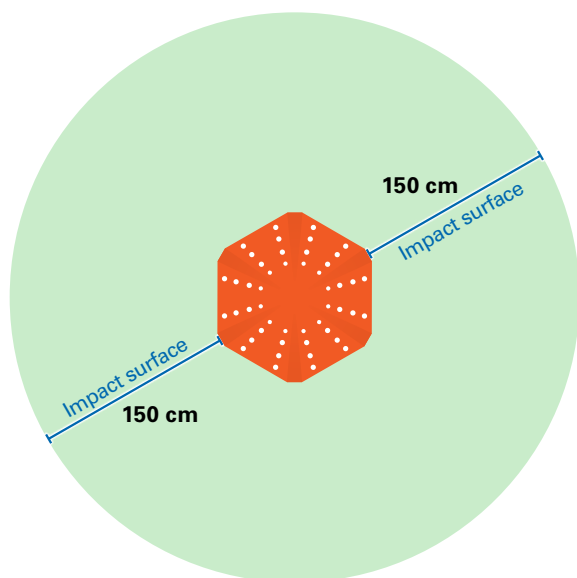


Safety area and distances

Above: Above the BounceCloud there should be at least 3.50 m of free space (no branches, power lines, etc.).

To the side: the equipment must be surrounded on all sides by a impact surface of at least 1.50 metres.

⚠ Attention: The BounceCloud may only be installed on a flat surface and never on a hill, incline or slope.



Maintenance recommendations

The BounceCloud must always be inspected for possible damage before use. It is particularly important to ensure that the jumping mat and frame parts are not damaged. Damage must be repaired immediately. If in doubt as to whether the appliance is in working order, always seek expert advice (e.g. from the manufacturer).

Check regularly:

- visible, walkable surface.

Check the appliance before use and replace any faulty or missing parts. Pay particular attention to the fact that:

- there is no damage to the surface;
- the suspension of the surface is in perfect condition;
- the frame has no cracks or other damage.

All spare parts available from Eurotramp upon request.




The very highest demands are placed on this high-end-product. For safety reasons, only use original replacement parts! The use of non-original replacement parts can result in considerable risk to the user (danger of accidents, technical defects, loss of the manufacturer's liability, loss of warranty etc.).


Multiple arrangement

If the BounceClouds are arranged in multiple rows, make sure that the long edges of the BounceClouds are adjacent to each other so that there is no gap. The assembly of each individual BounceCloud is carried out according to the respective assembly paths in the instructions.


Examples of possible arrangements:

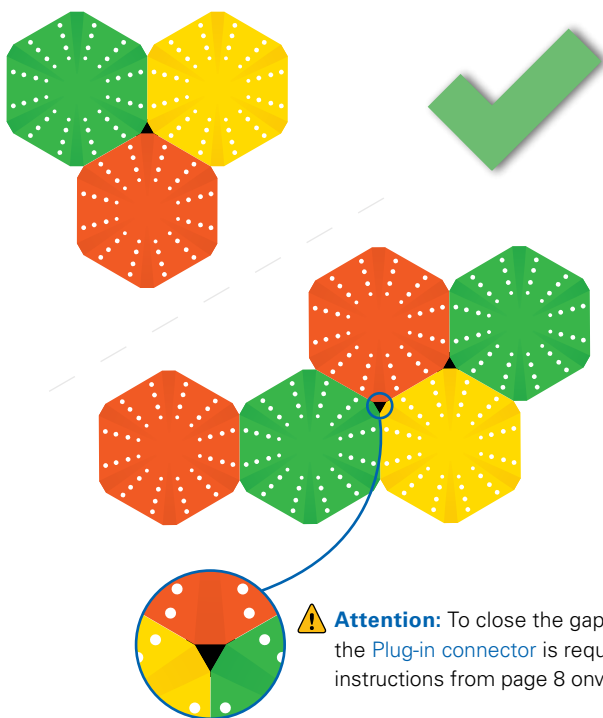

Example of incorrect arrangement:

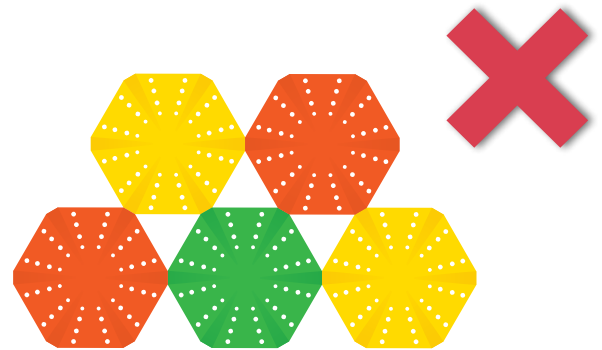


Assembly instructions - without foundation

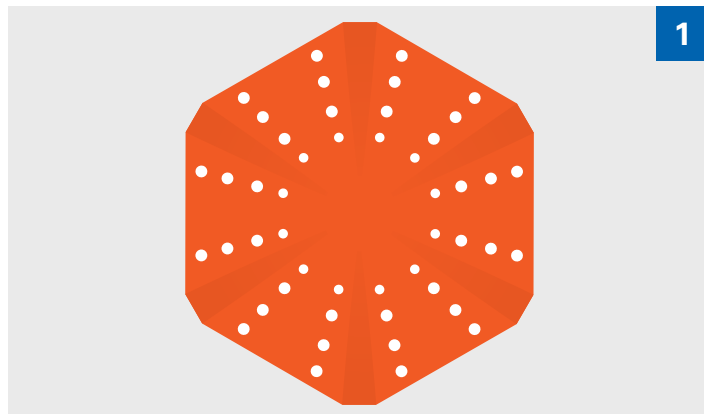



1

- Place the BounceCloud at the desired mounting location.
- Make sure that there is an impact area of 1.5 m in each direction around the desired placement without obstacles/hard edges. (DIN EN 1176 4.2.8 5.1))

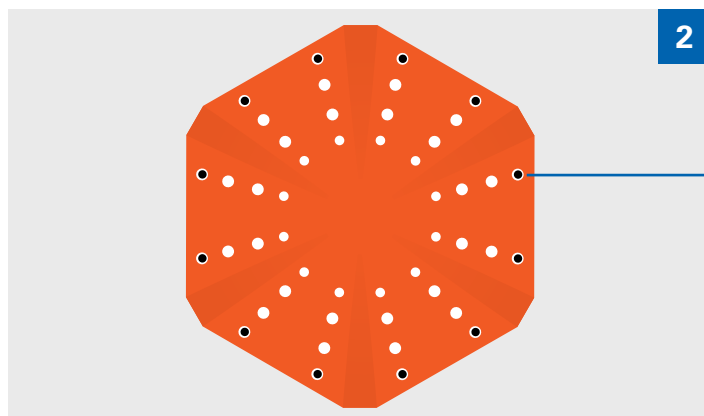

2

- Use a deep hole marker to mark the 12 drill holes.

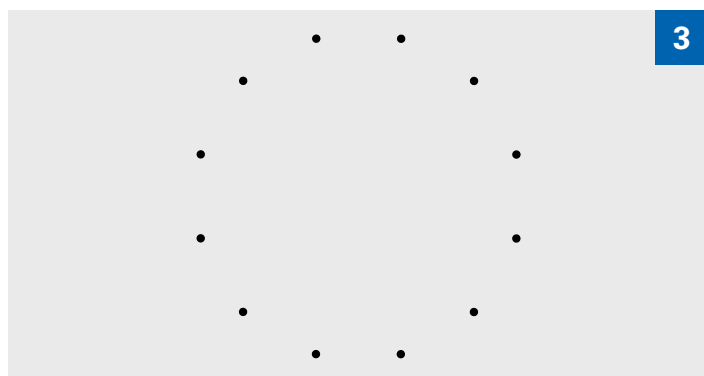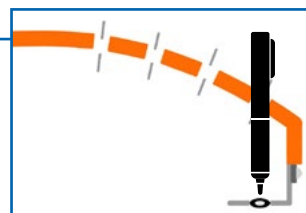


3

- Remove the BounceCloud and drill the marked holes.
- At least 1 screw must be inserted on each side. This means that at least 6 drill holes are required.




- In the case of a multiple arrangement where 3 BounceClouds meet: continue with

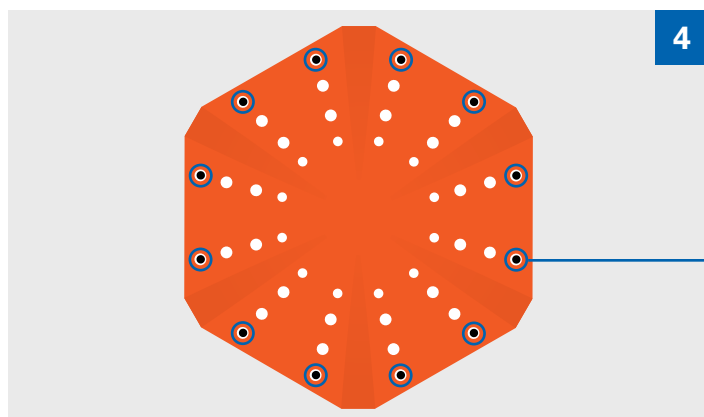


4

- Position the BounceCloud on the holes so that the screw holes align with the drill holes.
- Screw the BounceCloud down tight.

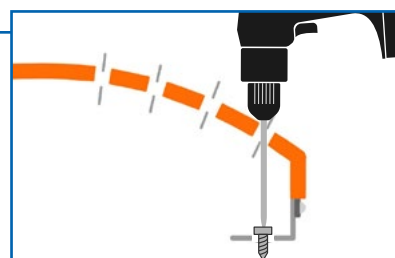


✓ Done!

Assembly instructions - with foundation

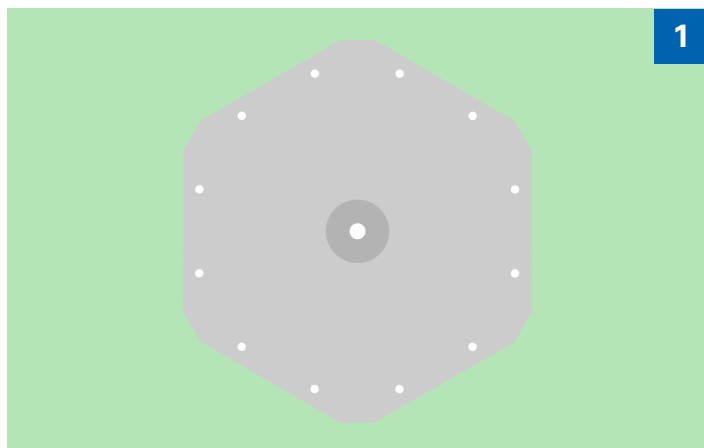


1

- Place the foundation at the desired installation location
- Make sure that there is an impact area of 1.5 m in each direction around the desired placement without obstacles/hard edges. (DIN EN 1176 4.2.8 5.1).

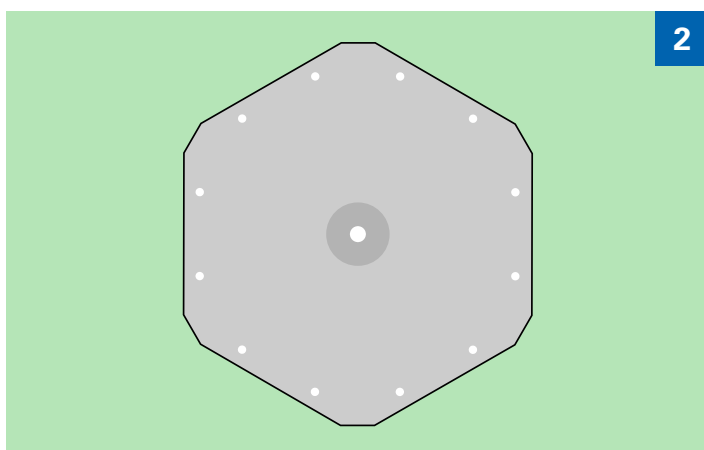


2


- Mark the outer contour of the foundation.

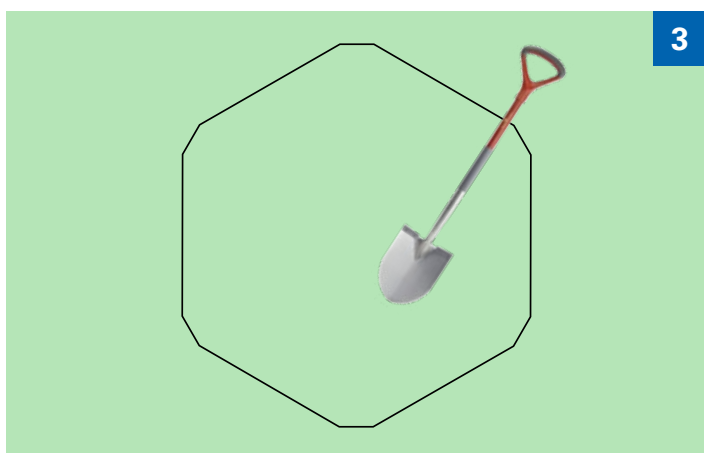


3

- Remove the foundation and dig a pit within the contour with a **depth of 25 cm**.
- Fill the pit with grit and level it so that the remaining pit has a **height of 8.5 cm**.

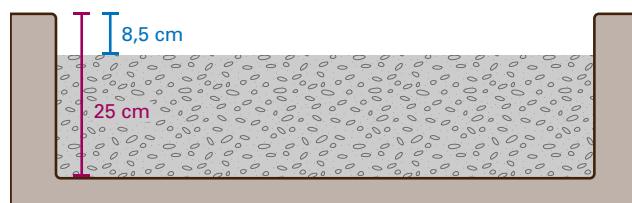

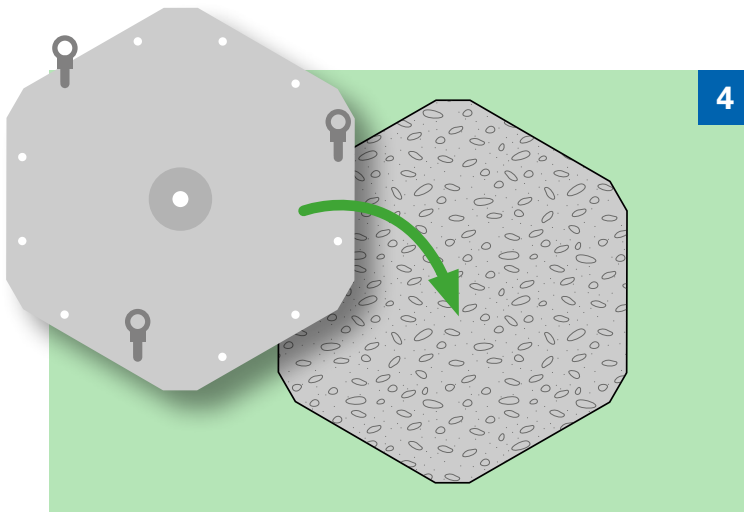


- Insert the foundation into the pit with the 3 x eye bolts and align it.

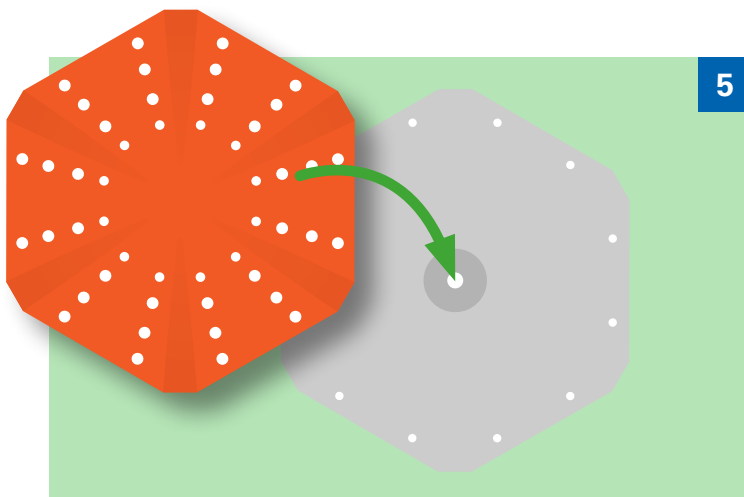


- Remove the eye bolts from the foundation by unscrewing them.
- Place the BounceCloud on the foundation so that the holes in the screw connections line up with the threaded holes.



- In the case of a multiple arrangement where **3 BounceClouds meet**: continue with

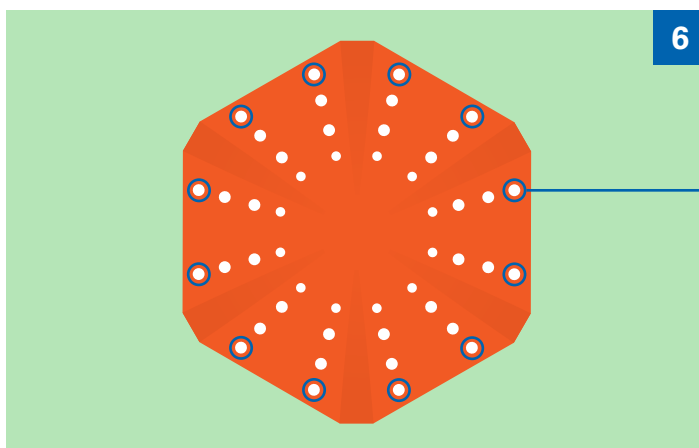


- Tighten the BounceCloud with the 12 hexagon head screws supplied.

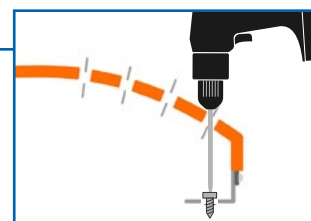


✓ **Done!**

Plug-in connector assembly

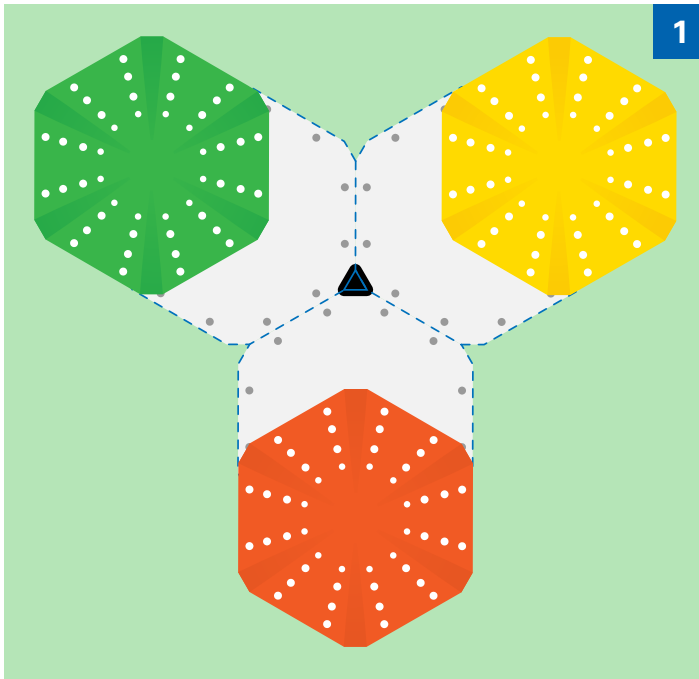

- The plug-in connector is attached regardless of whether the BounceCloud is installed with or without a foundation.
- Position the plug-in connector at the point where the 3 BounceClouds will meet, then place the BounceClouds at the designated points.

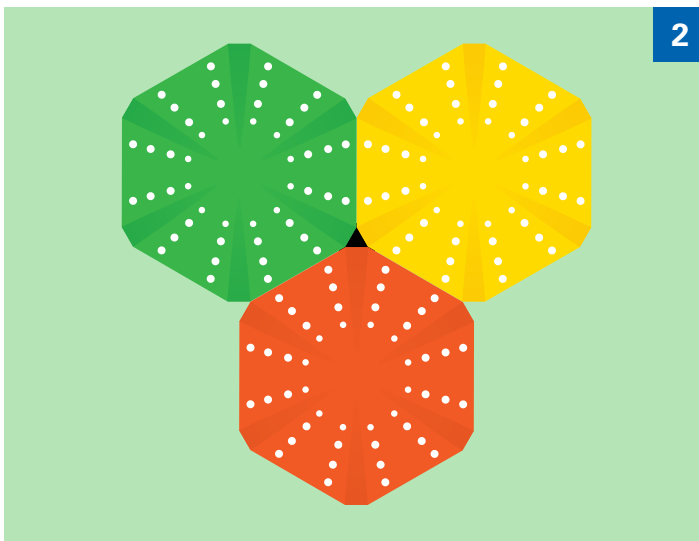

- Attach the BounceClouds as described in the installation instructions in step 4 - Installation without foundation, or step 6 - Installation with foundation, and check that the connector is firmly in place.

✓ **Done!**

If you have any questions, contact us any time:

Eurotramp - Trampoline Kurt Hack GmbH
Zeller Straße 17/1
73235 Weilheim

Tel. +49 (0)7023 - 9495-0 | Fax +49 (0)7023 - 9495-10
welcome@eurotramp.com | www.eurotramp.com