

Trolley for Free-Standing Goals

Thank you very much for choosing a Sport-Thieme product!


Please read the instructions fully before you assemble the equipment, so you can enjoy the product and safety is guaranteed. We are happy to answer any questions you may have.



Assembly instructions for Art.-Nr. 230 7204

1. Scope of delivery

Please check the following content before assembly.

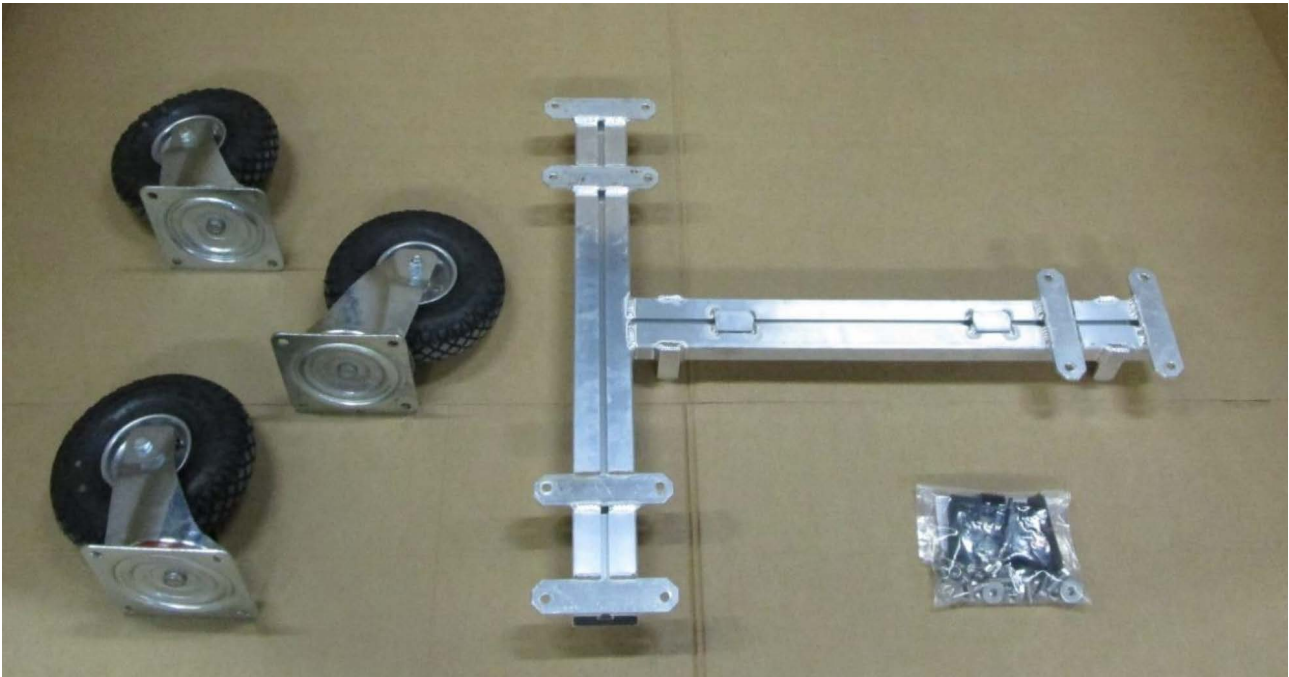

Contents:

- 1x Aluminium basic frame
- 3x Guiding roll
- 1x Accessories
- 1x Assembly instruction



Accessories:

- 12x Hexagon socket screw M10 x 25 mm DIN 933
- 12x Washer \varnothing 10.5 mm x 30 mm, DIN 125
- 12x Self-locking nut M10, DIN 985
- 3x Plastic cap 80 x 40 mm
- 2x Belt strap with buckle

2. Assembly


The following tools are necessary:

- 2 wrench/ring spanners 17 mm
- hammer/mallet



a) Fixing of caps:

Use a hammer/mallet to insert caps in the 3 lateral openings provided in the basic frame.

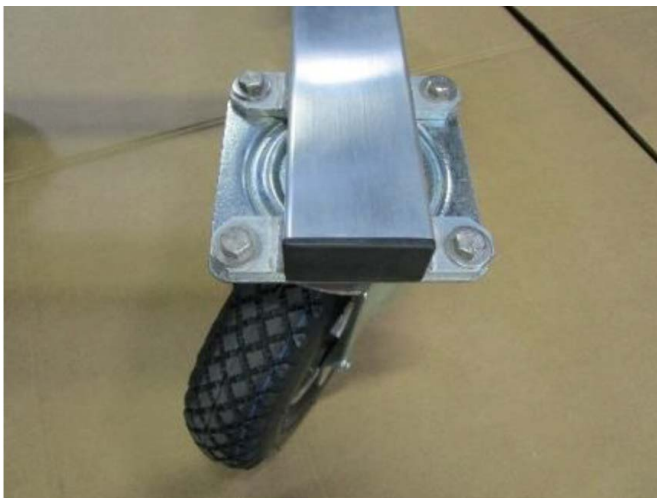

b) Fixing of guiding rolls:

Place guiding rolls at welded aluminium plates of the frame. Adjust holes of guiding rolls and aluminium plates. Then stick per roll 4 washers \varnothing 10.5 x 30mm on 4 hexagonal socket screws M10 x 25 mm, DIN 933.


Now stick them from the top through holes of aluminium plates and guiding rolls (see picture bottom left). Screw from the bottom self-locking nuts M10, DIN 985 and tighten them (see picture bottom right).



3. Transport of the goal

Lift the goal and push the trolley under one ground bar between the lateral guiding rails. The balance point has to be in the middle of the trolley. Fix the bar of the goal with two belt straps by pulling them through the welded plates from the bottom of the frame. Pull the belts through the buckles and tighten them (see pictures bottom left and right). Then lift the goal at the other side.

It is possible to move in all directions (see picture bottom right). Normally one trolley is sufficient to transport a goal. In case of big and heavy goals we recommend to use two trolleys which have then to be pushed under both bars.

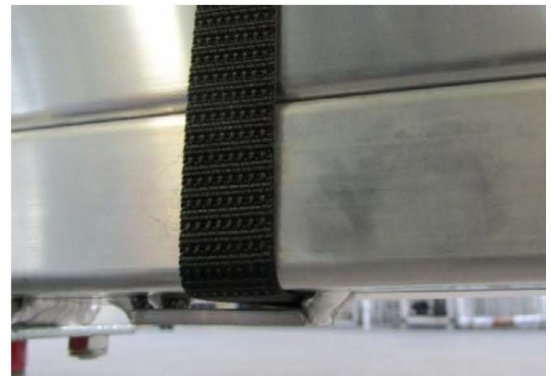

4. Maintenance and safety instructions



Check screwed fastenings regularly and change damaged and wearing parts if need be.

Take care that sloped surfaces may influence the balance point of the goal so that during transport you have always to observe the safe position of the goal.

The trolley is equipped with pneumatic-tyred rolls. Please check the pressure regularly.

Notice: Due to our continuous quality check of products and equipment technical modifications are possible.

Only use water for cleaning the surfaces. Do not use alcohol or any aggressive chemicals!